

BraceNBlock™ Edge

12" Metal Raised Bed Edging


- Attractive, unique, patented, double sided, metal mesh design enclosing a water permeable root blocking fabric stays in place and promotes excellent drainage.
- A landscape edging with a built-in drainage system. Stops flooded plant beds.
- Braces soil without support stakes.
- Blocks plant roots, tree roots, and weeds.
- Maximum soil anchoring without the need for anchor stakes.
- Patented soil bracing and root blocking design:
 - Made using galvanized metal wire mesh coated with vinyl enclosing a water permeable root blocking fabric.
 - Professional, heavy gauge construction.
 - UV inhibitors block sun rays for maximum vinyl durability.
- Durable, long lasting, and sturdy.
- Easy to use and install with minimal digging.
- Allows you to create beautiful landscapes.
- Replaces conventional edging products with its advantages, benefits, and multiple uses.
- Unconditional money back guarantee.

25 foot roll 12 inches wide.


BraceNBlock™ Splice Connectors, 90° Right Angle Connectors, and End Connectors sold separately.

U.S. Patent Nos. 6,108,972; 6,189,263; 6,230,439; 6,270,286; And Foreign Patent Rights Pending.
BraceNBlock™ And Logo Are Trademarks Of Solis International, Inc.
Copyright © 2002 By Solis International, Inc. All Rights Reserved.


Installation Instructions:

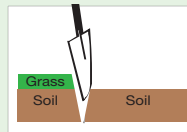

1. Dig Trench

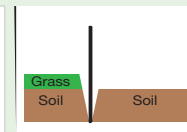

2. Place Edging

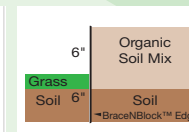

3. Fill Trench

- Use a rope or garden hose to lay out the landscape shape.
- Dig a trench 6" deep along the marked lawn area.
- Carefully measure and mark the edging to make exact, even cuts.
- Lay in the edging with 6" of the edging above ground and 6" below ground.
- Use the Splice Connector for splicing together the two ends of the landscape edging.
- Simply hammer the Splice Connector over the two ends of the landscape edging.
- Pack both sides of the edging with soil and press down firmly.
- Add a high organic soil mix to build the raised beds.

Tips:

- Cut to size with wire cutters or hacksaw.
- When properly installed your finished result will last for years.

Caution:

- Wear gloves for extra protection.
- Wear eye protection when using any striking tool.



Product Cat. No. 12MRBE



Please call us and visit our web site for more information on our products, pricing, and distribution.
Solis International, Inc., Memorial City Professional Building II, 909 Frostwood, Suite 162 - Houston, Texas 77024
Telephone: (713) 827-1500 - Fax: (713) 984-1500 - Web Site: www.braceNBlockEdge.com - Email: PatSolisMD@SolisInternationalInc.com

